



Base

Ajout

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

- 1 B7-1: Connectors, position light 1
- 2 B7-2: Connectors, position light 2
- 3 B7-3: Connectors, position light 3
- 4 B7-4: Connectors, position light 4
- 5 B3: 12V steady current
- 6 B2: 12V for ignition ON
- 7 B5: 12V when engine is running (D+)
- 8 B6: 12V for aux. heater

- 9 B4: Connector, vehicle control voltages
- 10 Flat vehicle fuse, 12V steady current
- 11 Flat vehicle fuse, position lights
- 12 Flat vehicle fuse, 12V for ignition ON
- 13 Flat vehicle fuse, aux. heater
- 14 B1: Connector, vehicle battery
- 15 Casing
- 16 Adhesive label